


Assembly and installation instructions

E-Flex[®]

large van racking unit with shelves

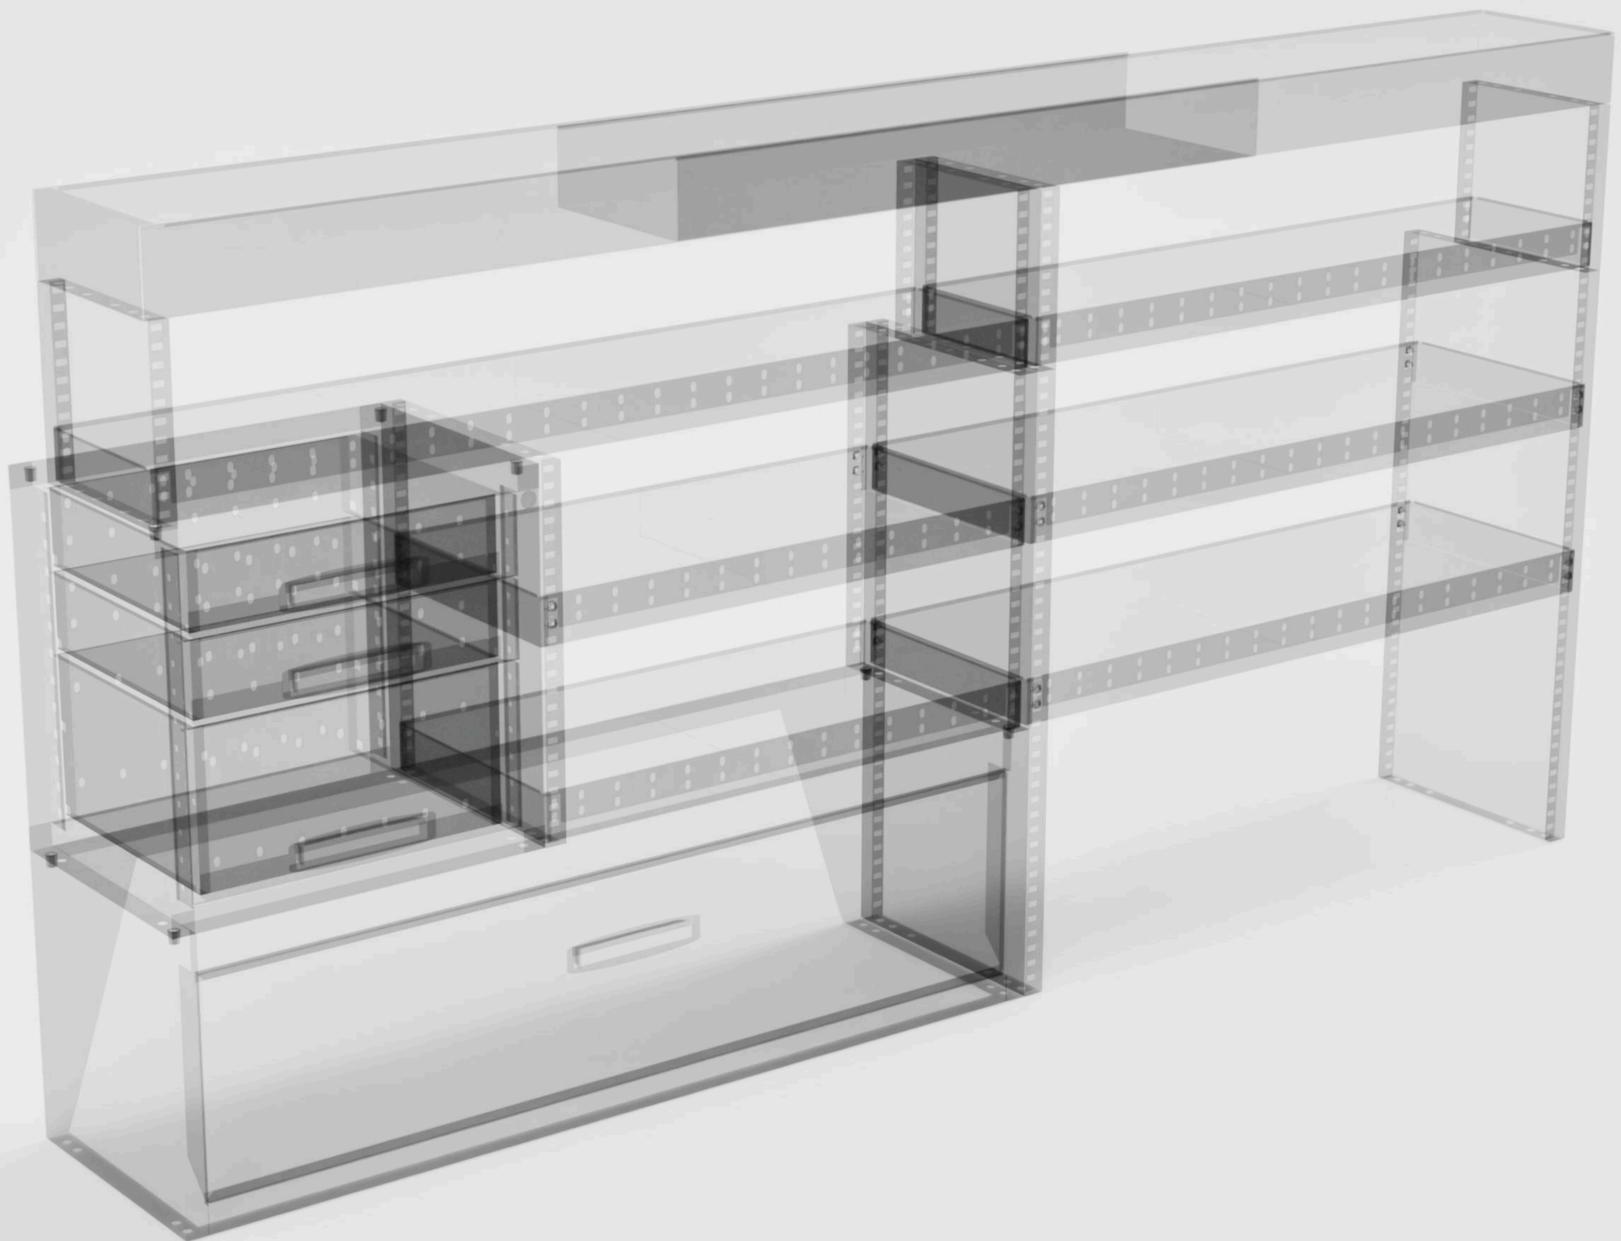

Assembly and Mounting Accessories



M8 Washer




Large M8 Washer




M6 Bolt



M8×16 Lock Bolt

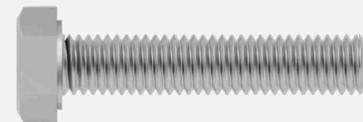


M8×30 Bolt

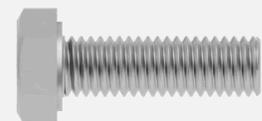


M8×20 Bolt



M8 Nyloc Flange Nut

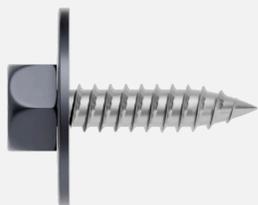

6.5×20 Screw

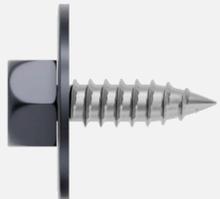

6.5×16 Screw



Angle Brackets

Suomen Pakuhylly Oy
Sulankaari 8, 04320 Tuusula

info@vanshelves.com
vanshelves.com





Business ID: FI23514442

large van racking unit with shelves

E-Flex[®]

Assembly

Attach the modules with M8×20 bolts and use washers at all connection points. In the open shelf section, use M6 bolts with pre-threaded holes. Washers are not needed. The upper shelf attachment in the middle, as well as the connection between the open shelf and the drawer unit, require drilling a new hole. These parts should be assembled in the vehicle.

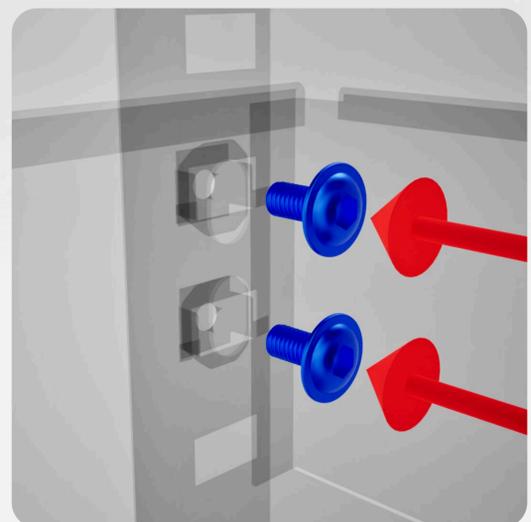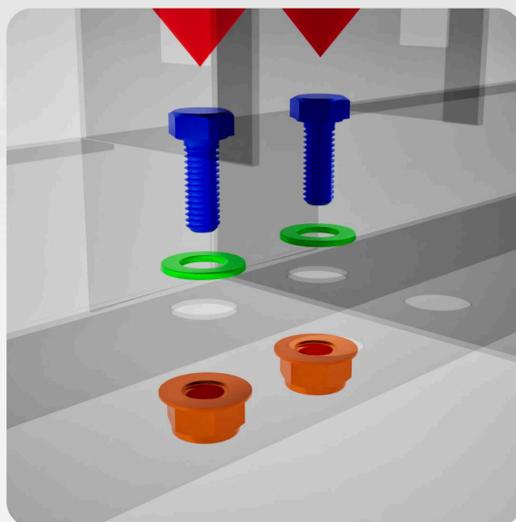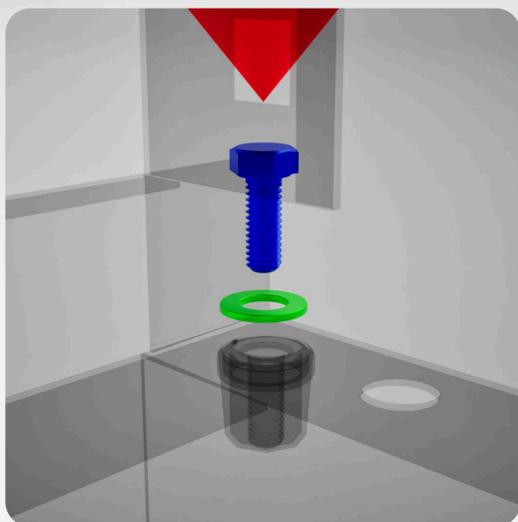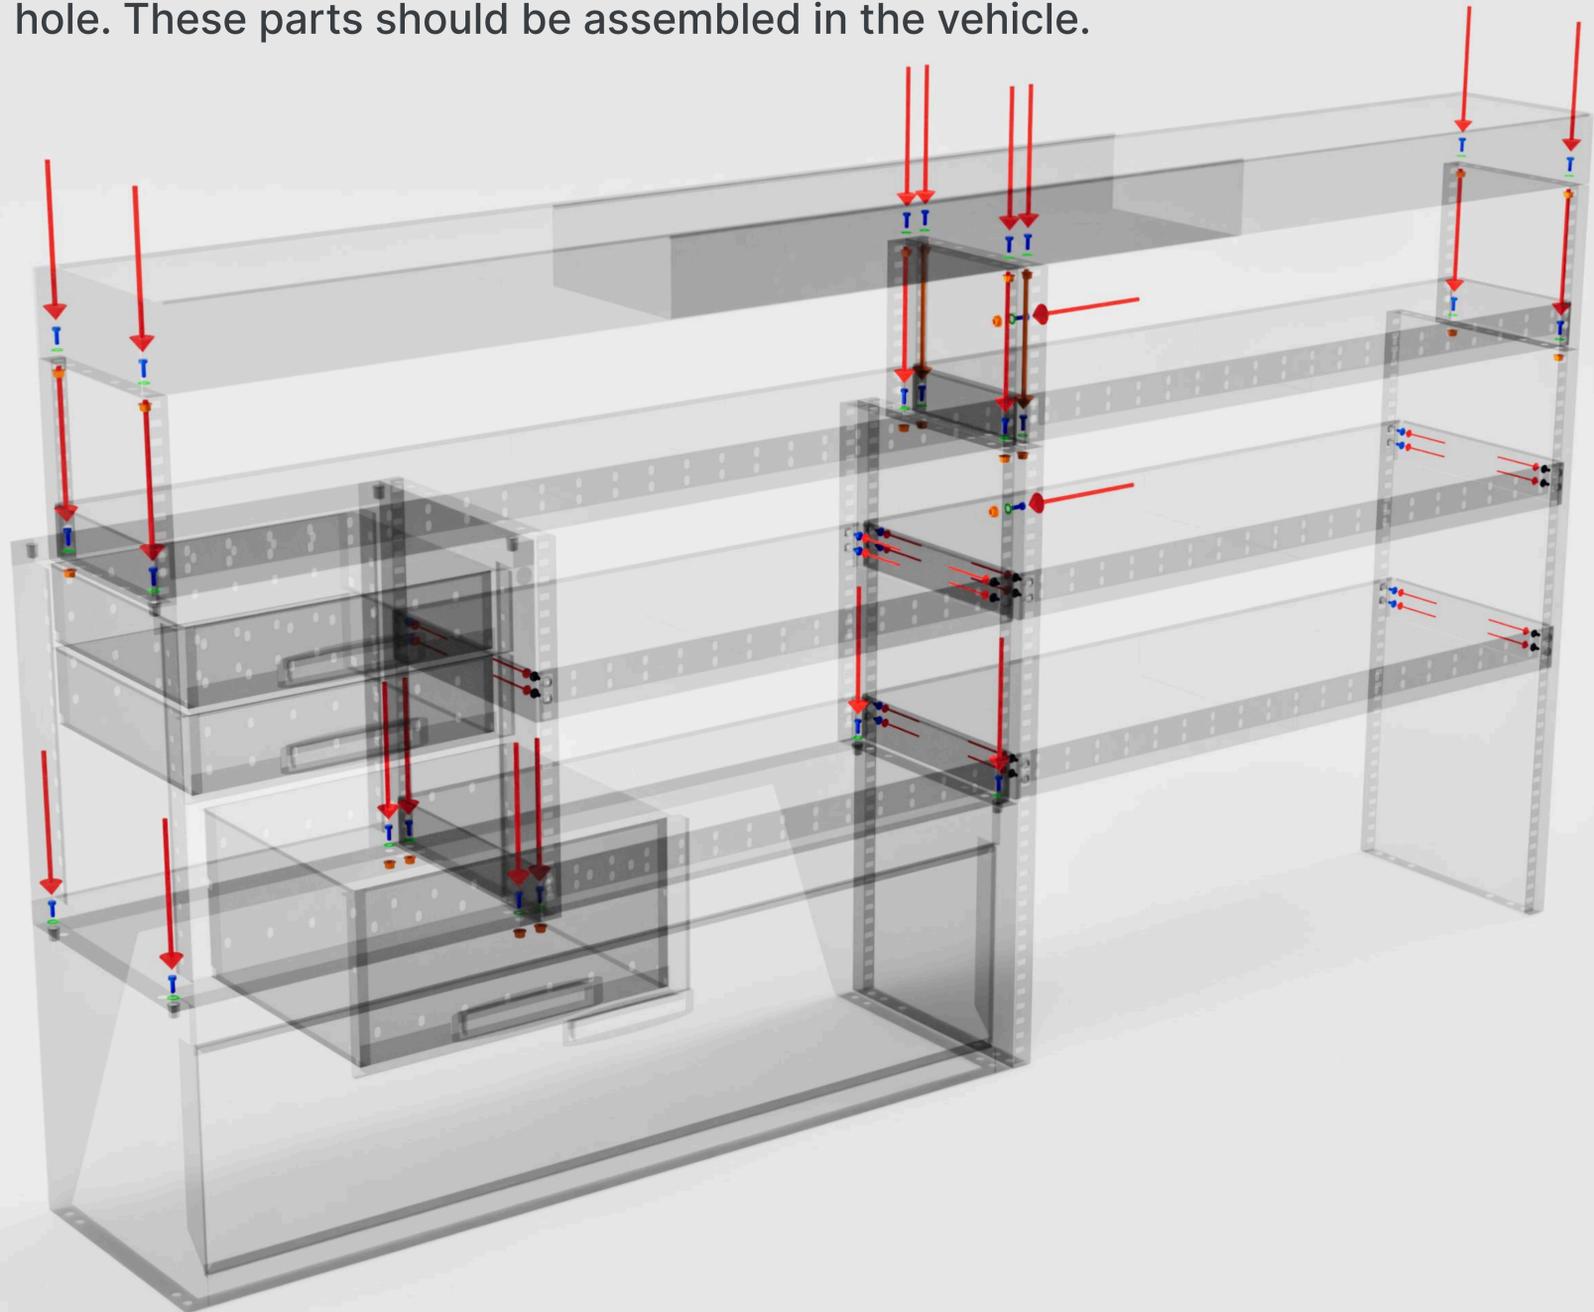


large van racking unit with shelves

E-Flex[®]

Installation

1. Place the furniture in a location where it can be attached at both ends with two angle brackets.
2. Fasten the furniture to the floor with 12 screws (20 mm with rubber mat, 16 mm without mat).
3. Secure the furniture firmly to the vehicle's frame as shown in the image. If the frame is not visible, its position can be estimated based on the mounting points of the protective plates.
4. Remove the mounting screws and apply glue to the joints. Reinsert the screws to ensure a sturdy result.

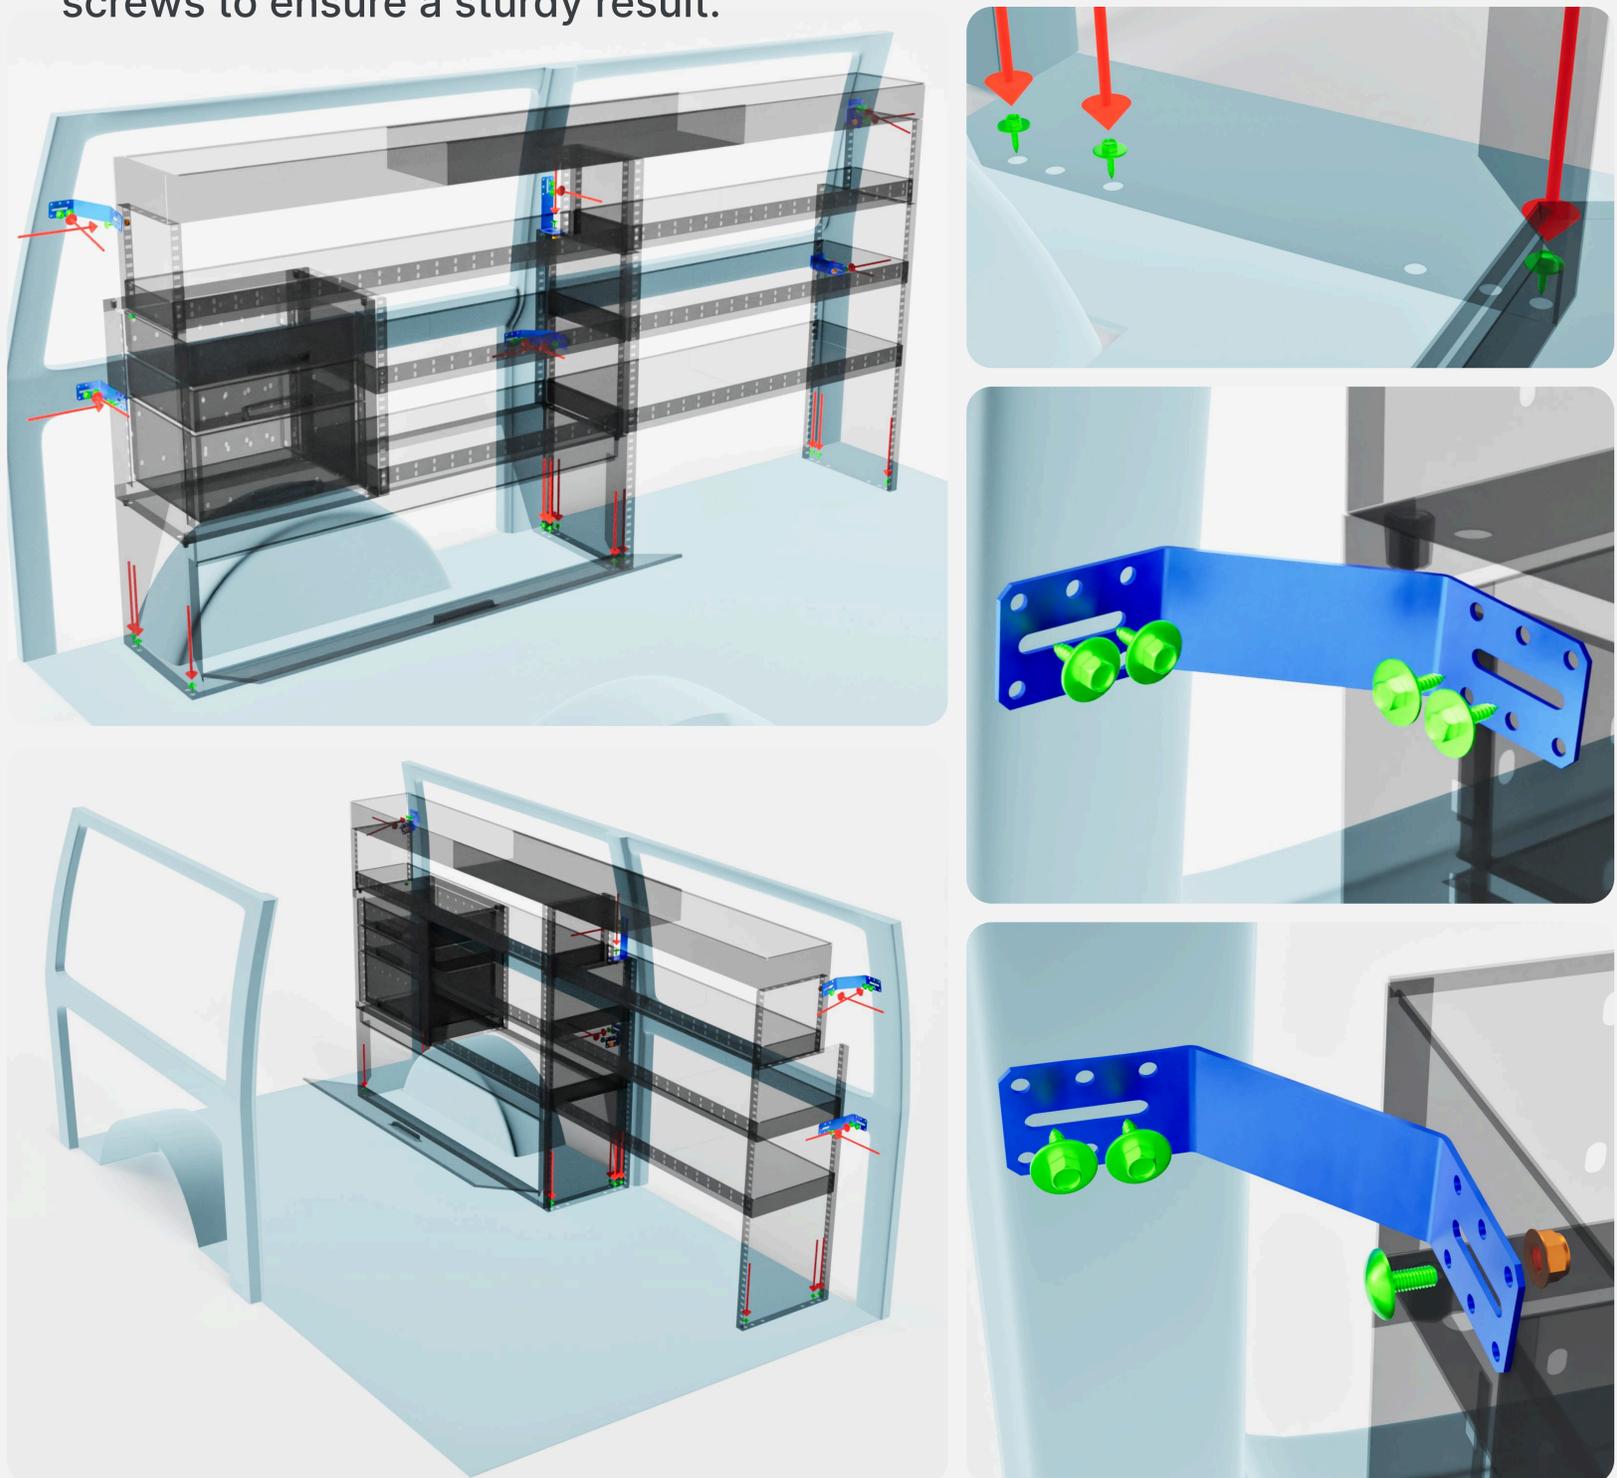

(i) NOTE, Make sure the mounting does not damage the vehicle's exterior sheet metal or wiring.

large van racking unit with shelves

E-Flex[®]