

Assembly and installation instructions

E-Flex[®]

van racking unit



Assembly and Mounting Accessories



M8 Washer



Large M8 Washer



M8×16 Lock Bolt



M8×30 Bolt



M8×20 Bolt



M8 Nyloc Flange Nut



6.5×20 Screw



6.5×16 Screw



Angle Brackets


Suomen Pakuhylly Oy
Sulankaari 8, 04320 Tuusula
info@vanshelves.com
vanshelves.com
Business ID: FI23514442

van racking unit

E-Flex[®]

Assembly

Attach the modules using the M8×20 bolts from the assembly kit as shown in the image. Use a washer at every joint. Some components have built-in threads, while others require nuts.

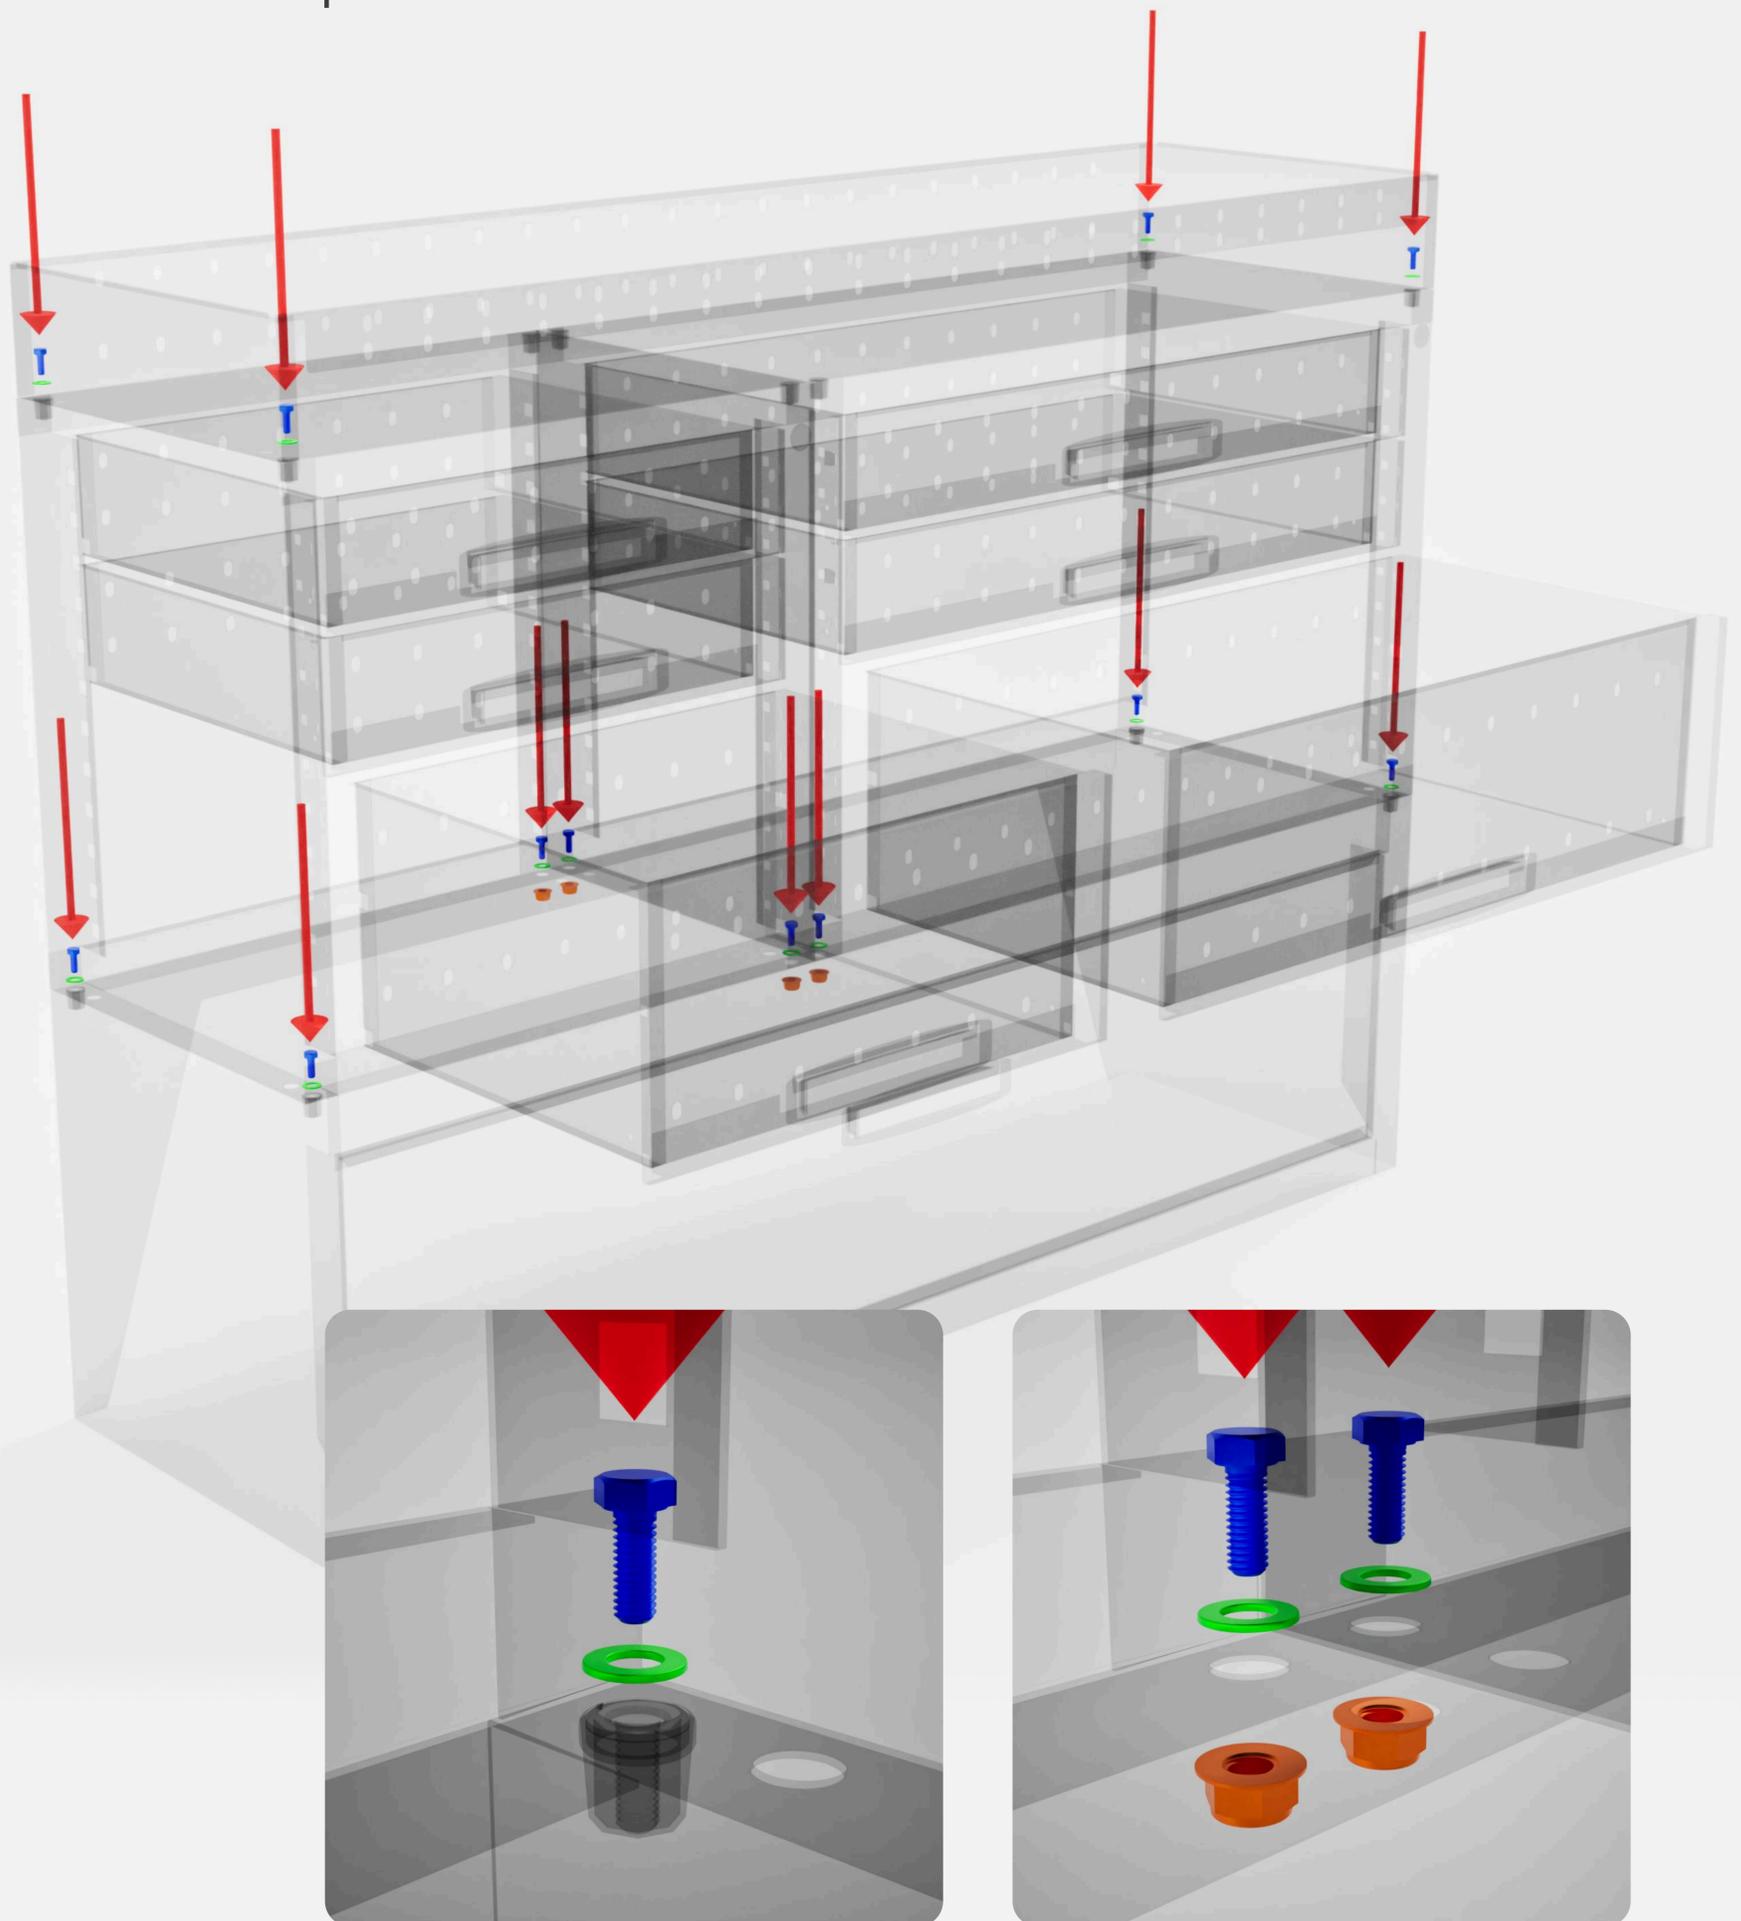


van racking unit

E-Flex[®]

Installation

1. Place the furniture in a location where it can be attached at both ends with two angle brackets.
2. Fasten the furniture to the floor with six self-tapping screws (20 mm with rubber mat, 16 mm without mat).
3. Secure the furniture firmly to the vehicle's frame as shown in the image. If the frame is not visible, its position can be estimated based on the mounting points of the protective plates.
4. Remove the mounting screws and apply glue to the joints. Reinsert the screws to ensure a sturdy result.

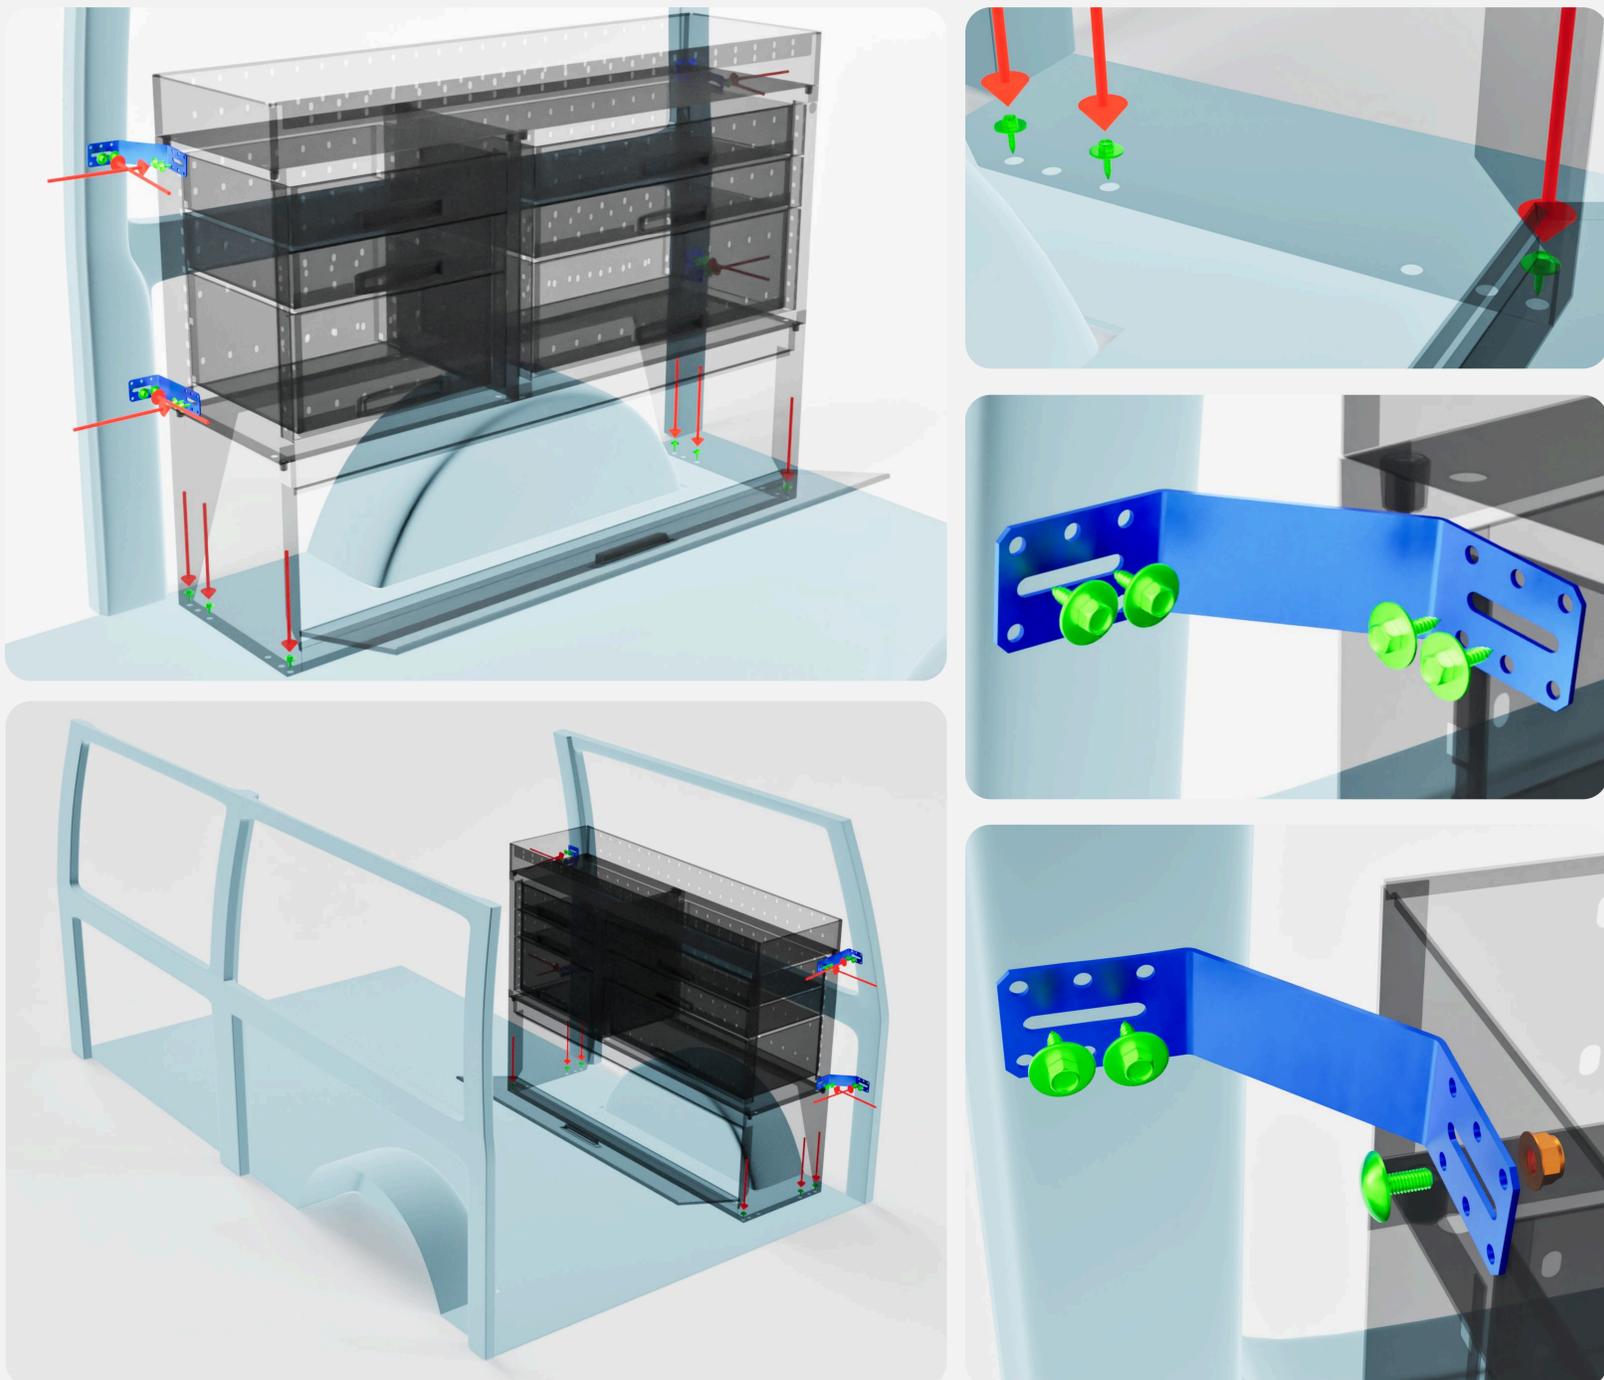

(i) NOTE: Make sure the mounting does not damage the vehicle's exterior sheet metal or wiring.

van racking unit

E-Flex[®]